





How to Add a Fax Number to the Fax (Classic) Screen on Your Ricoh/Savin Machine

1. From the Home Screen select the Fax Classic icon

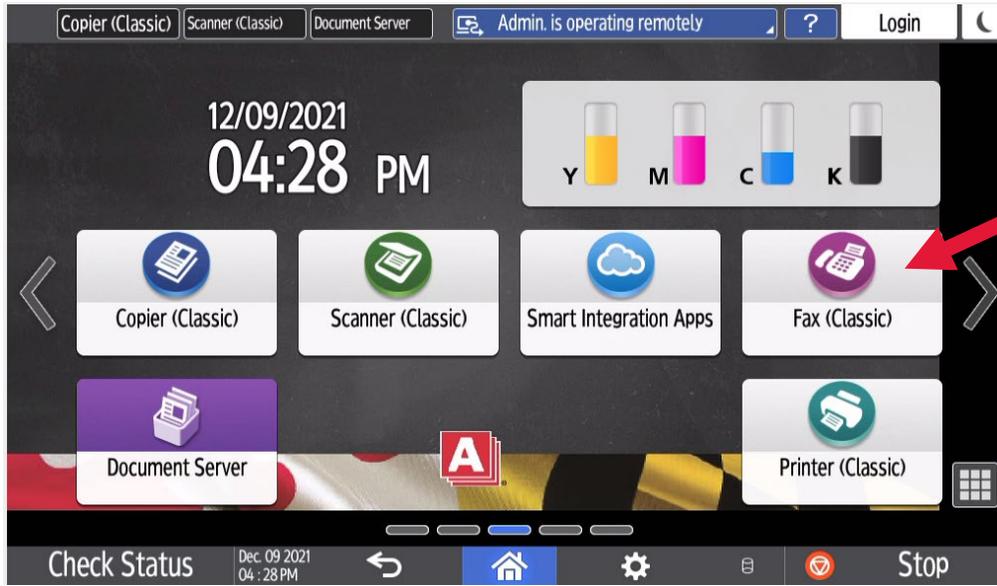

2. Dial in the fax number using the keypad

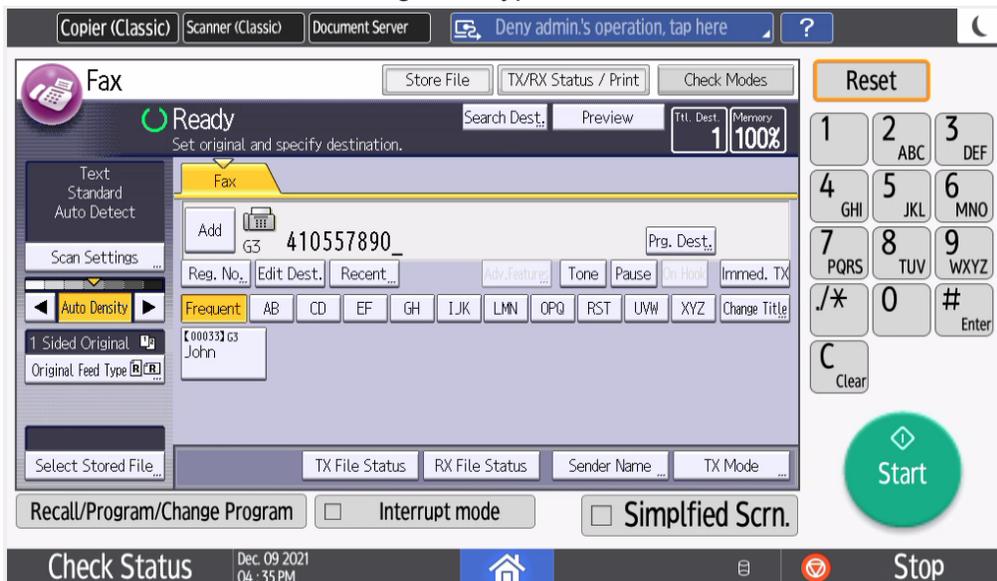


For More Information:

Contact an Advance Expert:


410.628.0490 or Dispatch@advancestuff.com



3. Select the "Prg. Dest" tab

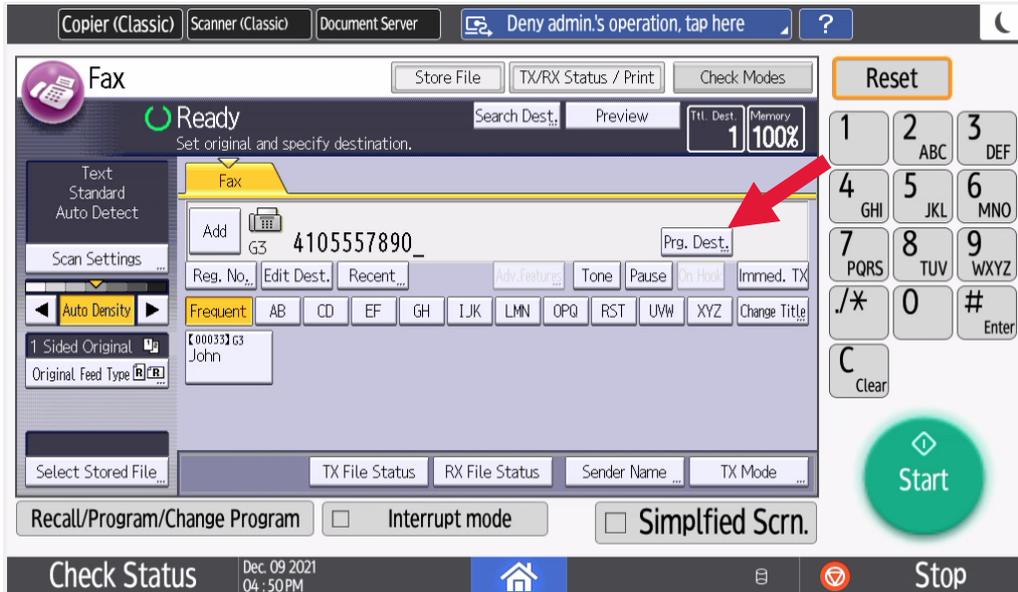

4. Enter the name in the Required Name field & select "OK"

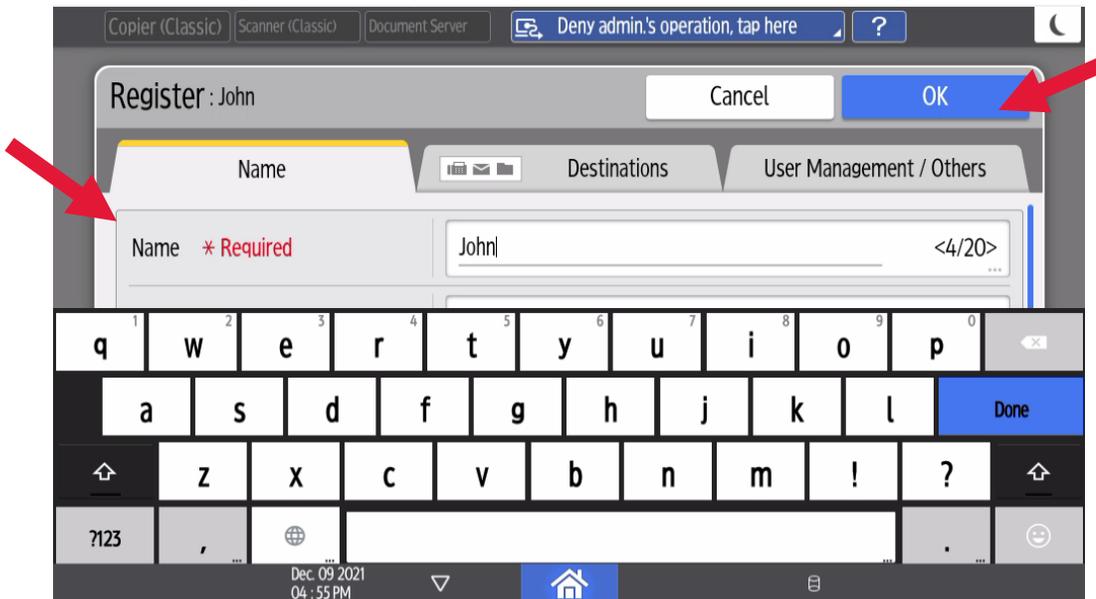

For More Information:

Contact an Advance Expert:


410.628.0490 or Dispatch@advancestuff.com

advancestuff.com

WE LIVE
AND
BREATHE
THIS STUFF.™



5. The fax number is now programmed on the Fax Screen

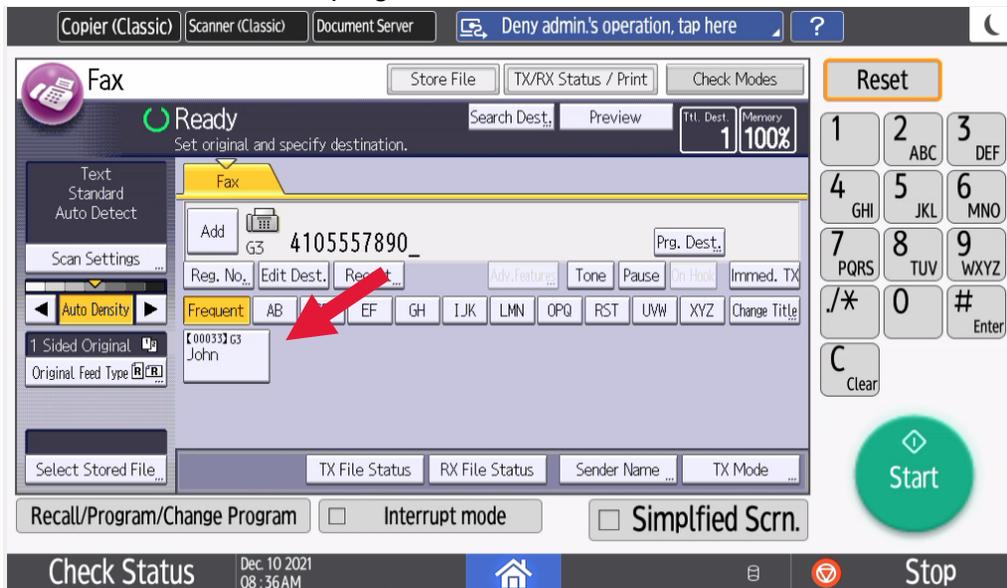

For More Information:

Contact an Advance Expert:

410.628.0490 or Dispatch@advancestuff.com