



How to Change the Toner on Your Canon Series Machine

1. Follow the screen prompt to open the front panel when indicated on the copier that toner needs replacing.



2. Remove the toner cartridge



3. Open the new cartridge and insert into the designated slot of the machine



4. Close the panel door

For More Information:

Contact an Advance Expert:

410.628.0490 or Dispatch@advancestuff.com