



How to Replace the Roll Media on Your KIP Device

1. Pull the blue lever to unlock the media drawer.



2. Holding both ends, “lift and remove the roll media” or an empty roll core.



3. Raise the green lever and remove both Flanges. Set aside for Step 5.



For More Information:

Contact an Advance Expert:

410.628.0490 or Dispatch@advancestuff.com



4. Move the right Side Guide to match your roll media's width. The right and left Side Guides will automatically move together.



5. Insert each Flange into both ends of the new roll to be installed (removed from Step 3). Push both the green levers down so they are flat against Flange.



6. Lift the roll of media by holding both Flanges and lower them in the Slide Guides.




For More Information:

Contact an Advance Expert:

410.628.0490 or Dispatch@advancestuff.com



7. Insert the roll so it is in line with the arrow and rotate knob clockwise until it catches.

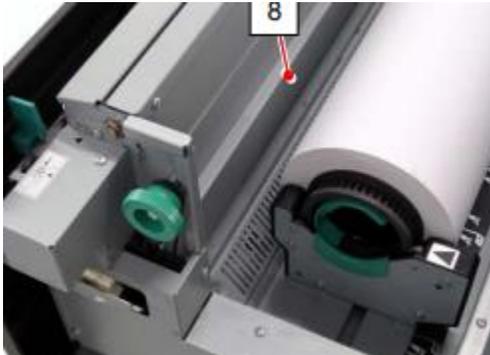

8. Close Roll Deck
9. Confirm Media size on the Screen

For More Information:

Contact an Advance Expert:

410.628.0490 or Dispatch@advancestuff.com